


DTM185 SPARE PARTS

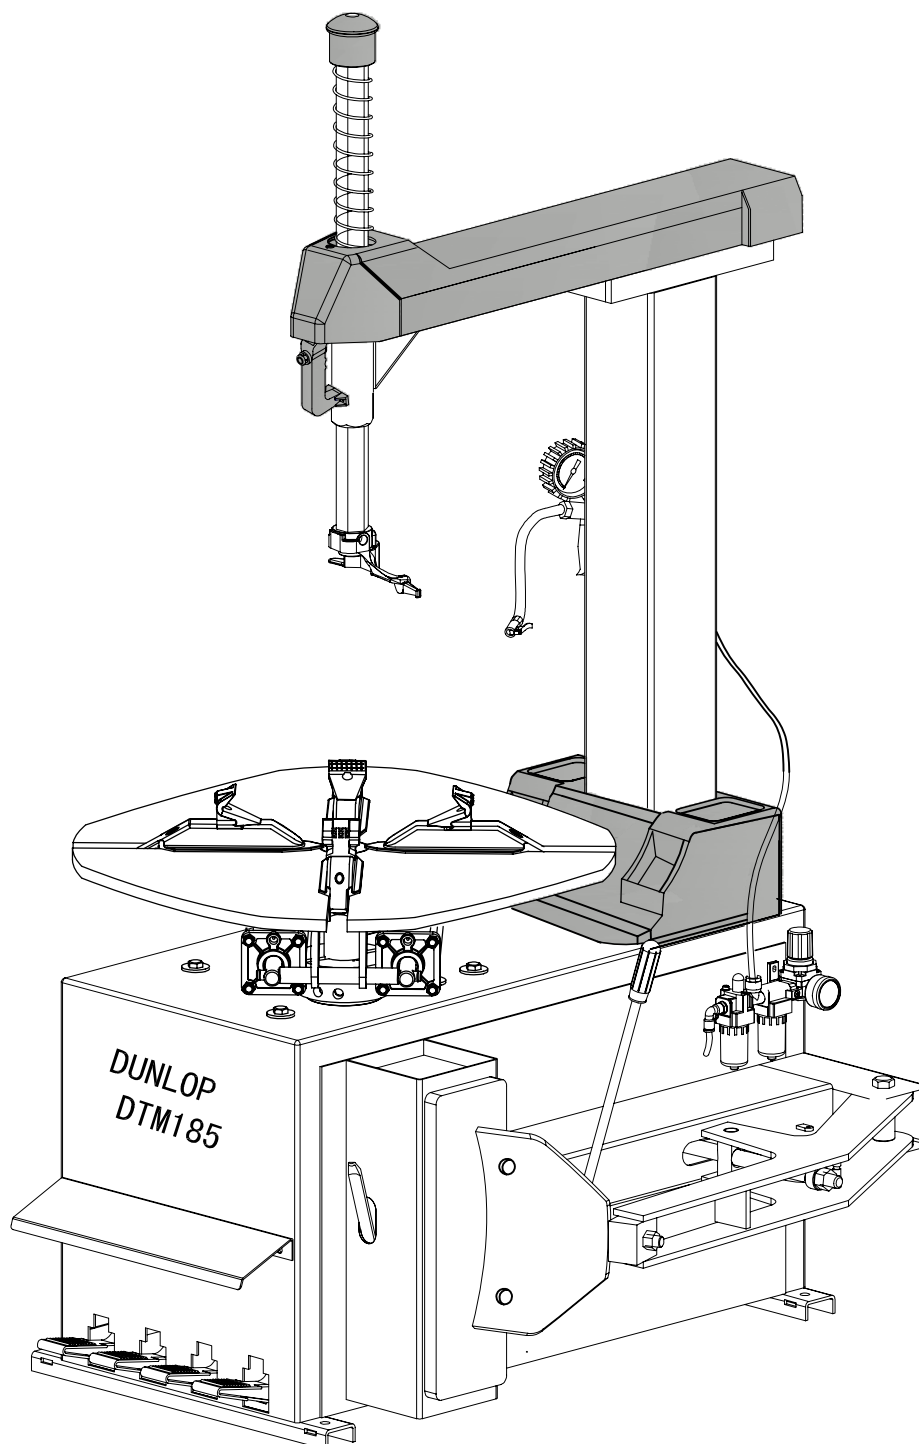

QJ/GM. DTM185. 00F-2007-A EDITION




2007-04-18

Plastic 
damageable★

DTM185 SPARE PARTS-BODY

QJ/GM. DTM185. 00F-2007-A EDITION

Page 1 of 6

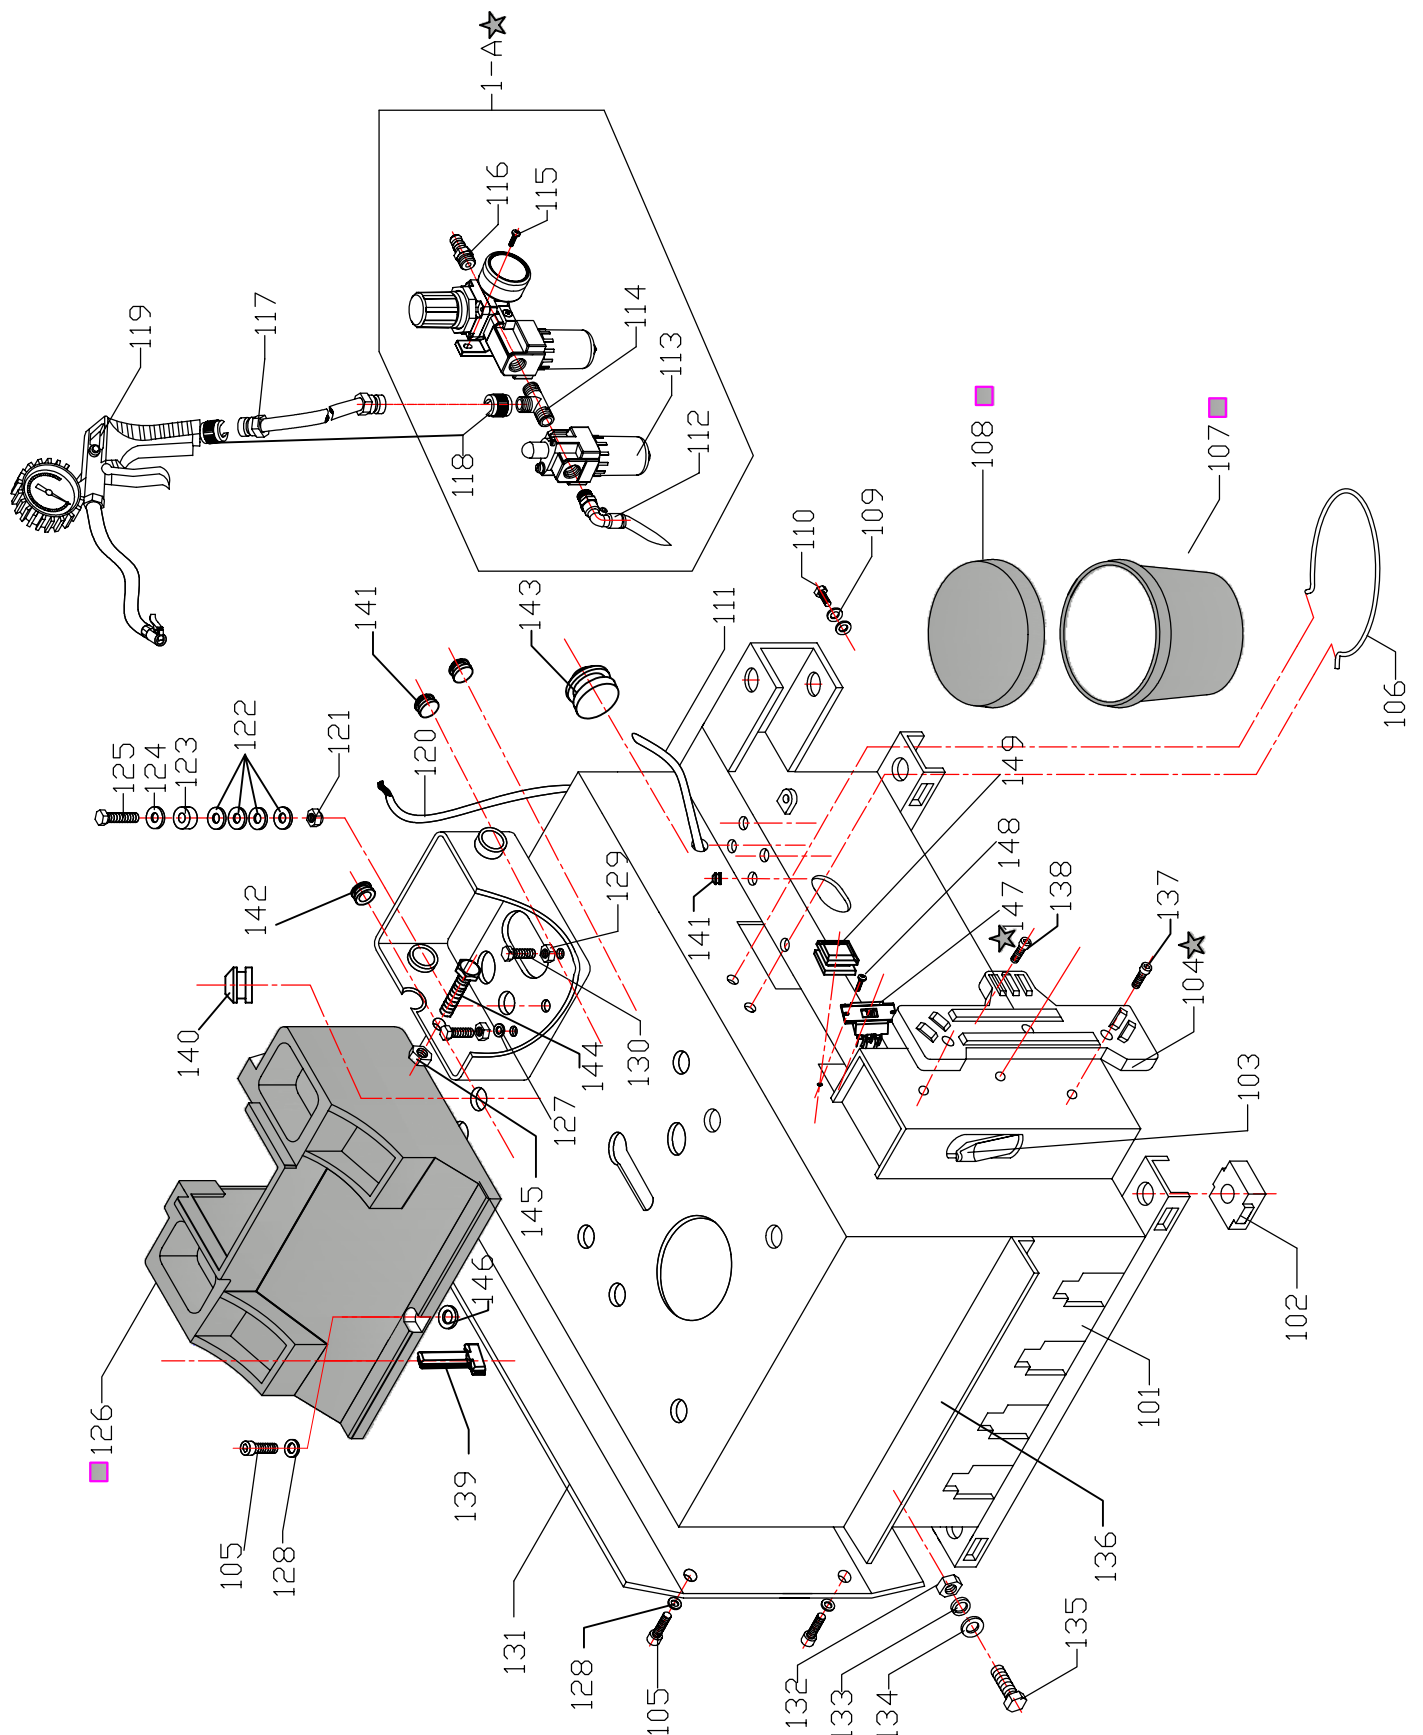

DTM185 SPARE PARTS-BODY

QJ/GM.DTM185.00F-2007-A EDITION


Page 1 of 6

[illegible]

DTM185 SPARE PARTS—VERTICAL ARM

QJ/GM. DTM185. 00F-2007-A EDITION

Page 2 of 6

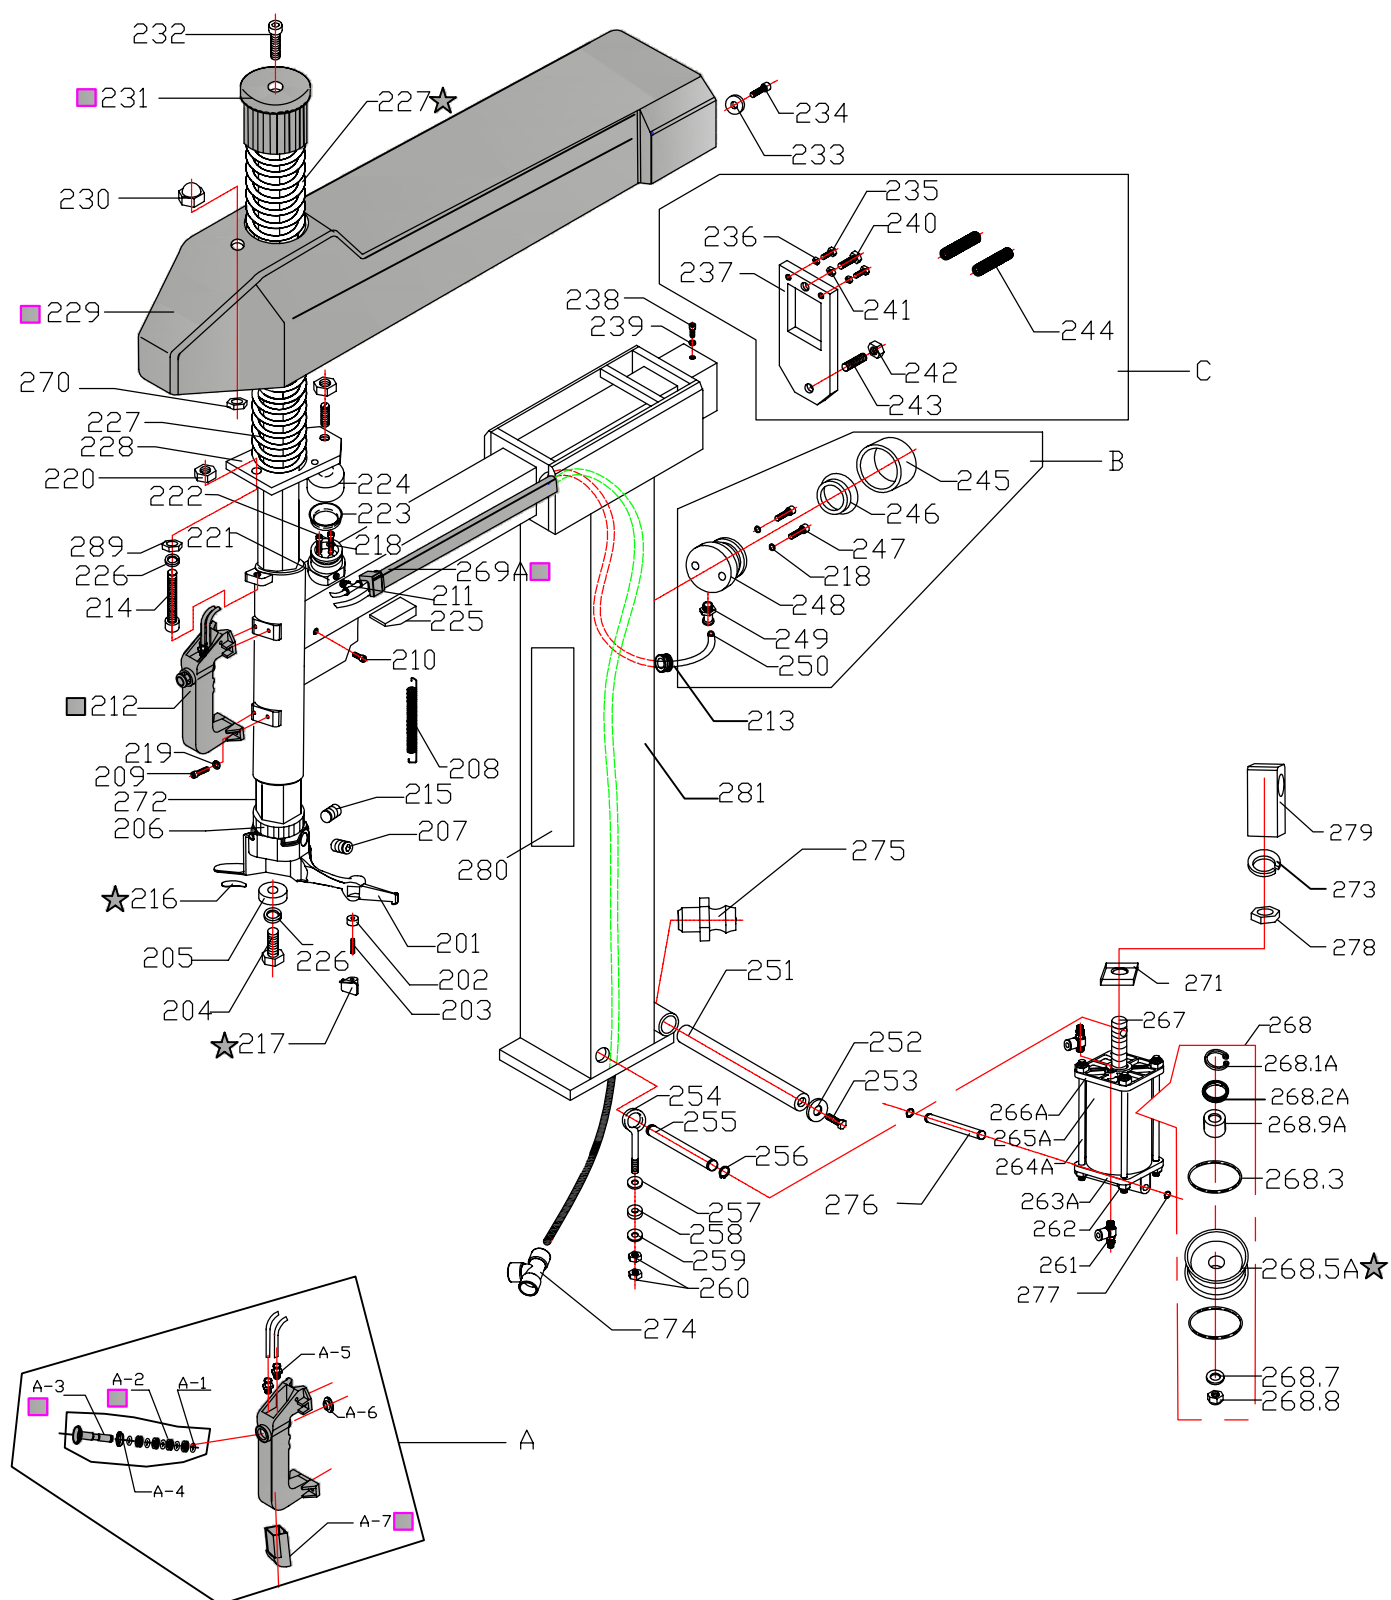

DTM185 SPARE PARTS—VERTICAL ARM

QJ/GM. DTM185. 00F-2007-A EDITION

Page 2 of 6

Ref.	Code	Description	Specification	Q'ty	Purchased order	Revised NO.
201		Mounting head	4 #	1		
202	GT890. 03. 12	Roller	13X13	1		
203	GT890. 03. 13	Pin	6X24	1		
204		Screw	M10X25 8.8 degree	1		
205	GT890. 03. 11	Pressing washer	Ø34XØ11X8	1		
206		Shock absorber	S36	1		
207		Pin	M12X12	2		
208	GT885. 03. 08	Spring	2. 0X9X95	2		
209		Screw	M4X16	4		
210		Screw	M6X10	2		
211		Union	G1/8"—Ø6	1		
212		Handle		1		
213		Stop-up	M20	1		
214		Screw	M10X85	1		
215		Pin	M12X16	2		
216		Plastic protection cover		1		
217		Plastic protection cover		1		
218		O-ring	Ø10X2	4		
219		Flat washer	4	4		
220		Locknut	M10	1		
221	GT885. 03. 11	Cylinder body		1		
222		Screw	M6X35	2		
223		Y-ring	65X8	1		
224	GT885. 03. 10	Cylinder housing		1		
225		Positioning blade		1		
226		Elastic washer	10	2		
227	GT890. 03. 04	Spring	ø640X3. 0X50	1		
228	GT885. 03. 07	Locking plate		1		
229		Protection cover		1		
230		Nut	M10	1		
231	GT890. 03. 03	Knob	M10	1		
232		Screw	M10X30	1		
233		Flat washer	6	1		
234		Screw	M6X16	1		
235		Screw	M6X30	2		
236		Nut	M6	2		
237	GT885. 03. 12. 00	Locking plate		1		
238		Screw	M6X10	1		
239		Elastic washer	6	1		
240		Screw	M8X35	1		
241		Nut	M8	1		
242		Nut	M10X1	2		
243		Pin	M10X1X25	2		
244	GT885. 03. 13	Spring	2. 0X14. 5X13	2		
245	GT885. 03. 10	Cylinder housing		1		
246		Y-ring		1		
247		Screw	M6X35	2		
248	GT885. 03. 11	Cylinder body		1		
249		Union	G1/8"—Ø6	1		
250		PU hose	Ø6X1 hard hose	3. 8m		
251	GT885. 03. 15	Rotating spindle		1		
252	GT885. 03. 14	Washer		2		
253		Screw	M16X25 8.8 degree	2		
254	GT885. 03. 17	Connecting rod		1		
255	GT885. 03. 16	Spindle	□16	1		
256		Seeger ring	16 #	2		
257		Washer	10	1		
258		Washer	30X15X10	1		
259		Washer	10	1		
260		Nut	M10	2		
261		Valve	G1/8"—Ø8	2		
262		Locknut	M8	8		
263A	T-XD. 00. 06	Cylinder rear housing		1		
264A	T-XD. 00. 03A	Union		4		
265A	T-XD. 00. 01A	Cylinder body		1		
266A	T-24X. 00. 01A	Cylinder front housing		1		

Page 2 of 6


[illegible]

DTM185 SPARE PARTS-PEDAL UNIT

QJ/GM. DTM185. 00F-2007-A EDITION

T-D.04.00

Page 3 of 6

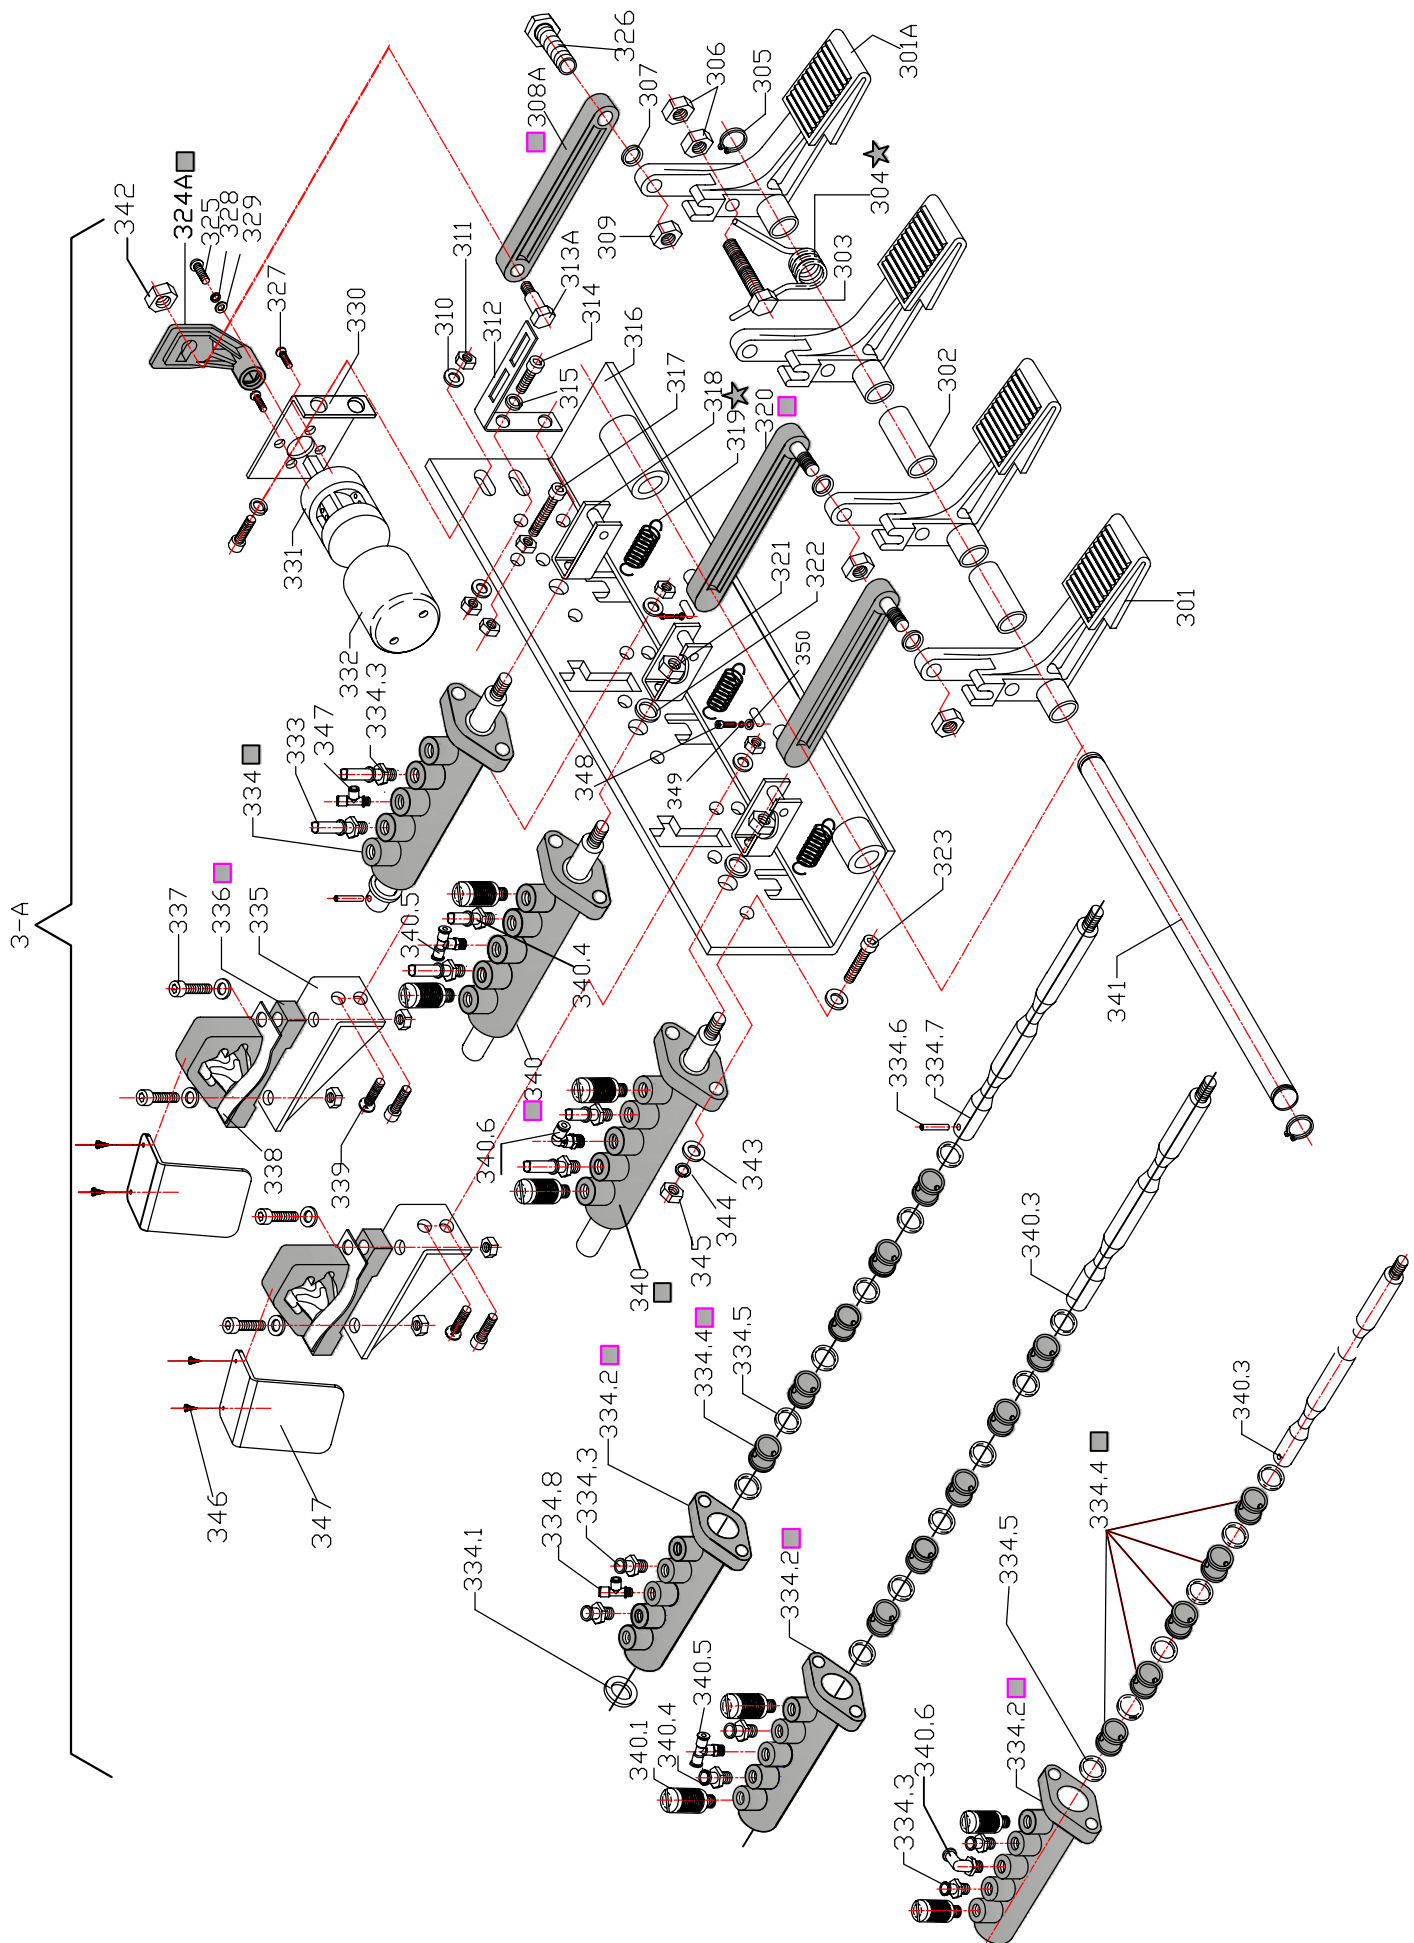

DTM185 SPARE PARTS-PEDAL UNIT

QJ/GM. DTM185. 00F-2007-A EDITION

T-D.04.00Page 3 of 6


Ref.	Code	Description	Specification	Q' ty	Purchased order	Revised NO.
301	T-D. 02. 12B	Pedal		3		
301A	T-D. 02. 12C	Pedal		1		
302	T-D. 02. 01	Spacer		2		
303		Screw	M8X55 (half)	1		
304	T-D. 02. 02	Spring		1		
305		Seeger ring	14#	2		
306		Nut	M8	2		
307	T-D. 02. 25	Spacer		3		
308A	T-D. 02. 22	Switch connecting rod		1		
309		Locknut	M8	3		
310		Flat washer	6	8		
311		Nut	M6	14		
312	T-D. 02. 21A	Spring bracket		1		
313A	T-D. 02. 26	Spindle		1		
314		Screw	M6X16	6		
315		Elastic washer	6	11		
316	T-D. 04. 02. 00	Pedal bracket		1		
317		Screw	M6X30	1		
318	T-D. 02. 15	Bracket		3		
319	T-D. 02. 04	Spring		3		
320	T-D. 01. 09	Connecting rod		2		
321		Locknut	M8	3		
322	T-D. 02. 10	Spacer		2		
323		Screw	M5X25	6		
324A	T-D. 01. 11	Reverse lever	□8 (big)	1		
325		Screw	4X10	1		
326		Screw	M8X40	1		
327		Screw	M5X16	4		
328		Elastic washer	4	1		
329		Flat washer	4	1		
330	T-D. 02. 17	Switch bracket		1		
331		Reverse switch	40A	1		
332		Reverse switch guide		1		
333		PU hose	∅8X5	some		
334		Valve assemble		1		
334.1		Flat washer	10	1		
334.2	T-D. 02. 14	Valve body		3		
334.3		Union	G1/8"-∅8	4		
334.4	T-D. 01. 16	Spacer		15		
334.5		O-ring	∅17X4	18		
334.6		Spring pin	∅4X20	1		
334.7	T-D. 02. 07	Valve pin		1		
334.8		Union	∅8 1/8	1		
335	T-D. 02. 05	Cam bracket		2		
336	T-D. 01. 10	Cam		2		
337		Screw	M6X25	4		
338		Fork plate spring		2		
339		Screw	M6X16	2		
340		Valve assemble		2		
340.1		Silencer	G1/8"	6		
340.2						
340.3	T-D. 02. 07	Valve pin		2		
340.4		Union	G1/8"-∅6	2		
340.5		Union	∅8 1/8	1		
340.6		Union	∅8 1/8	1		
341	T-D. 04. 01	Spindle		1		
3-A	T-D. 04. 00	Pedal assembly		1		
342		Locknut	M8	1		
343		Flat washer	∅5	12		
344		Elastic washer	∅5	6		
345		Nut	M5	6		
346		Screw	M3X10	4		
347		Cam baffle		2		
348		Screw	M10X25	2		
349		Elastic washer	∅10	2		
350		Flat washer	∅10	2		
351						

DTM185 SPARE PARTS—TURNTABLE

QJ/GM. DTM185. 00F-2007-A EDITION

T-20Y.00.00

Page 4 of 6

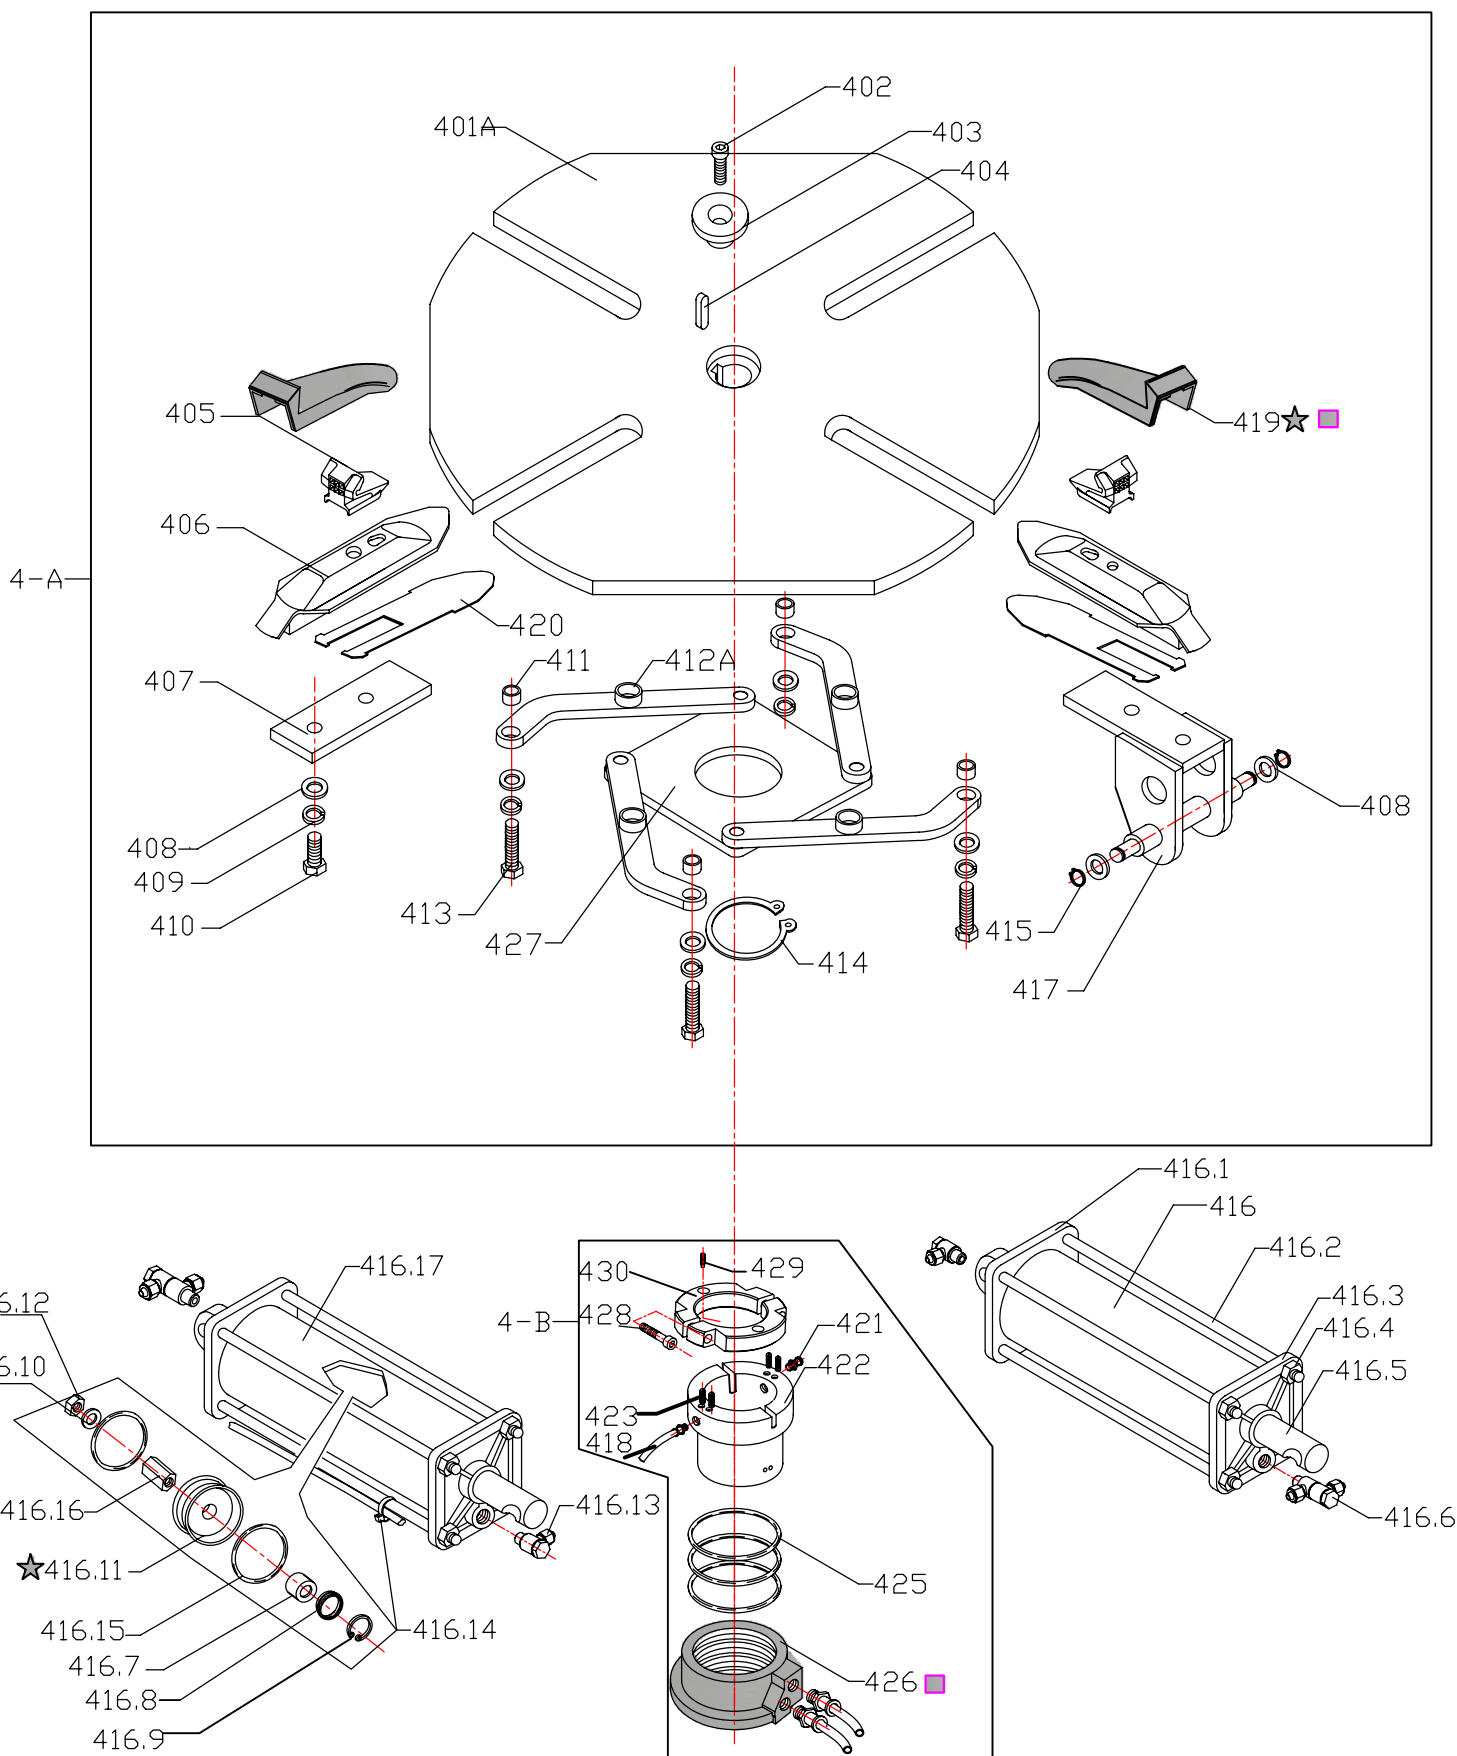

DTM185 SPARE PARTS-TURNTABLE

QJ/GM. DTM185. 00F-2007-A EDITION

T-20Y.00.00 Page 4 of 6


[illegible]

DTM185 SPARE PARTS-BEAD BREAKER

T-B.02.00A
T-LS.02.00A

QJ/GM. DTM185. 00F-2007-A EDITION

Page 5 of 6

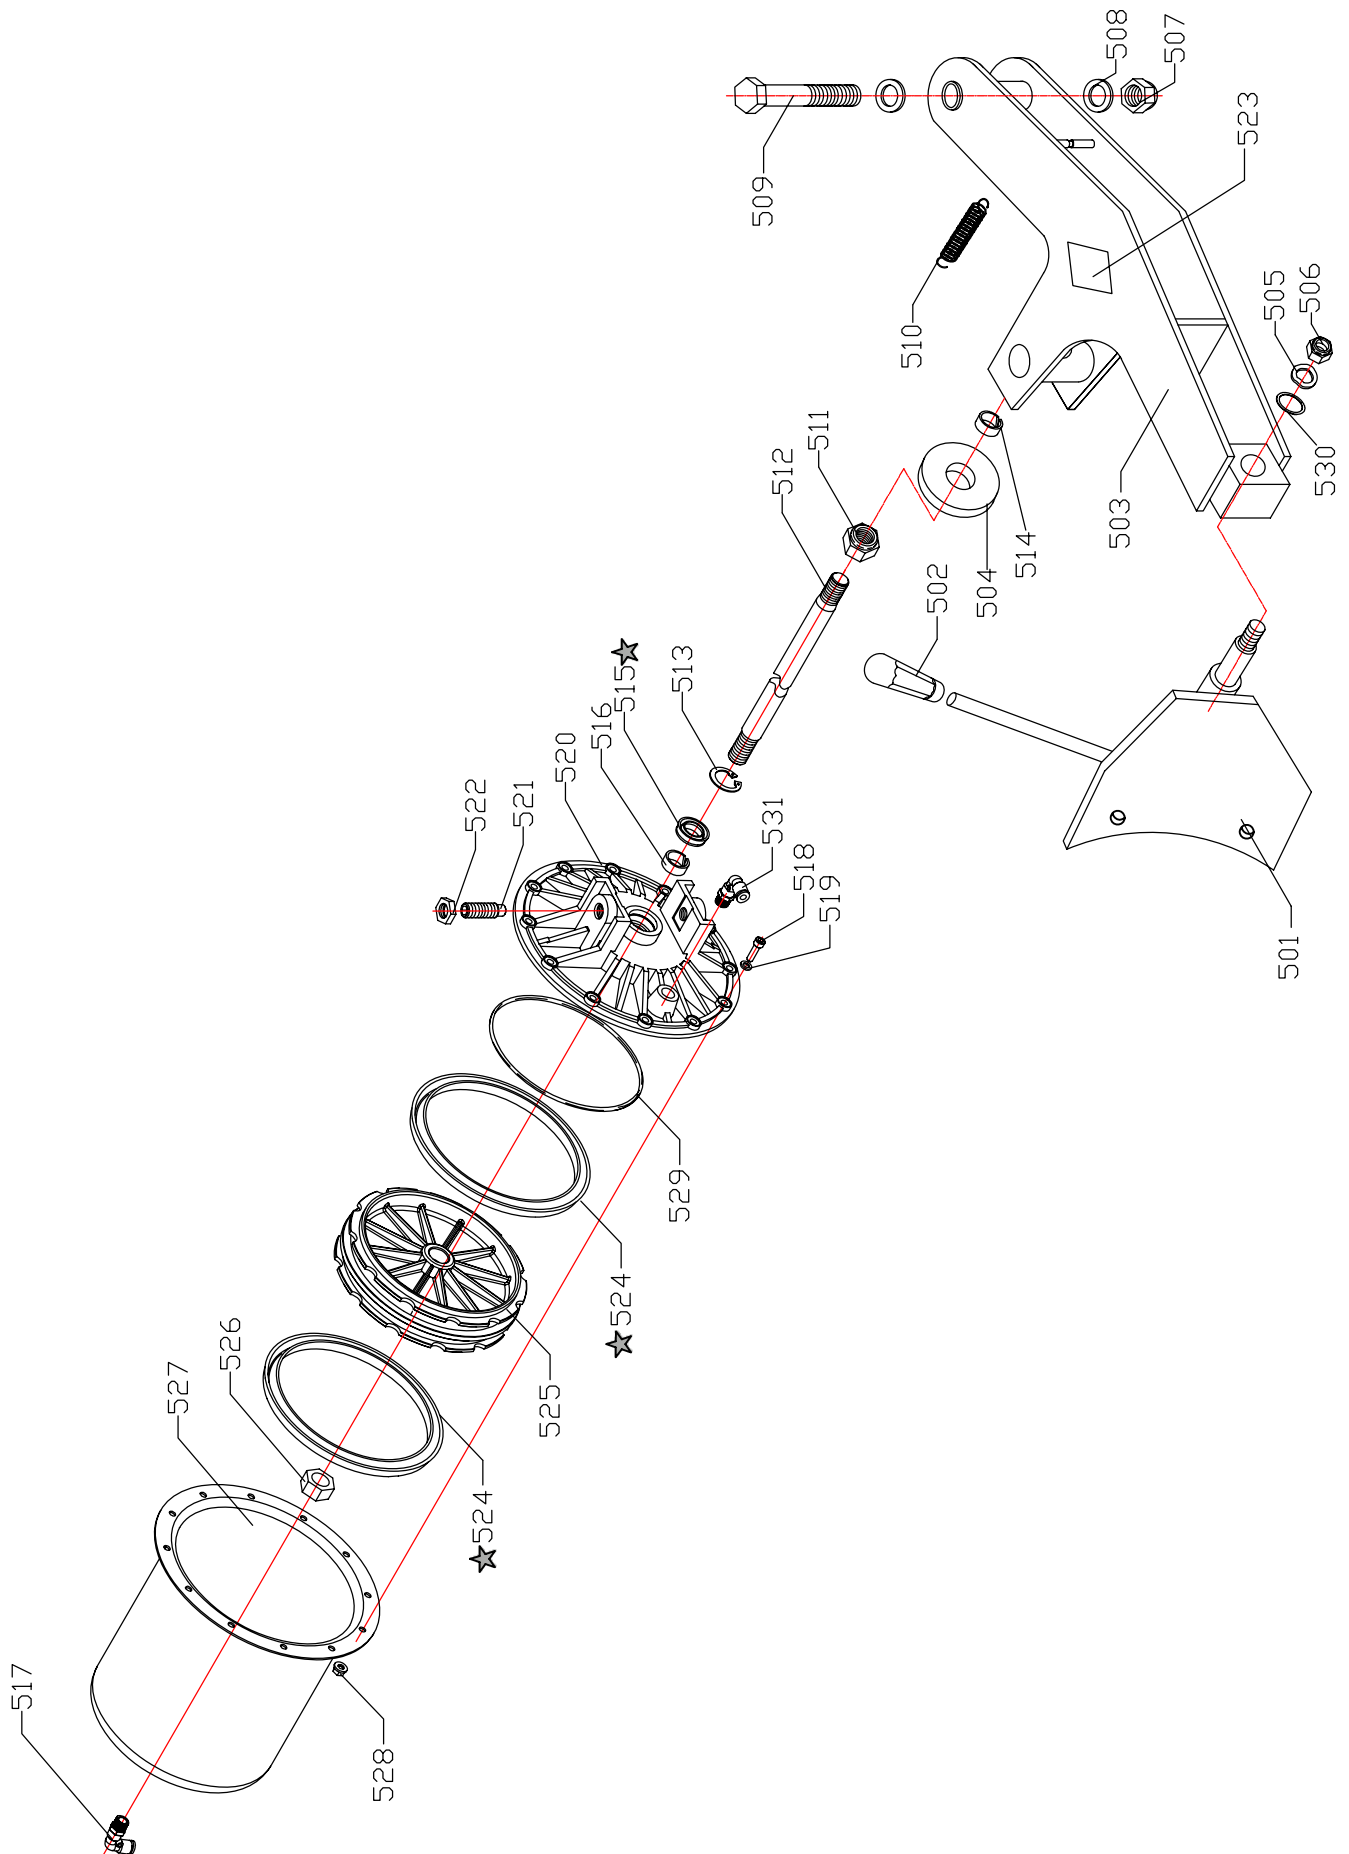

DTM185 SPARE PARTS-BEAD BREAKER

T-B.02.00A

T-LS.02.00A

QJ/GM.DTM185.00F-2007-A EDITION

Page 5 of 6


[illegible]

DTM185 SPARE PARTS-GEARBOX

QJ/GM. DTM185. 00F-2007-A EDITION

Page 6 of 6

T-J.00.00

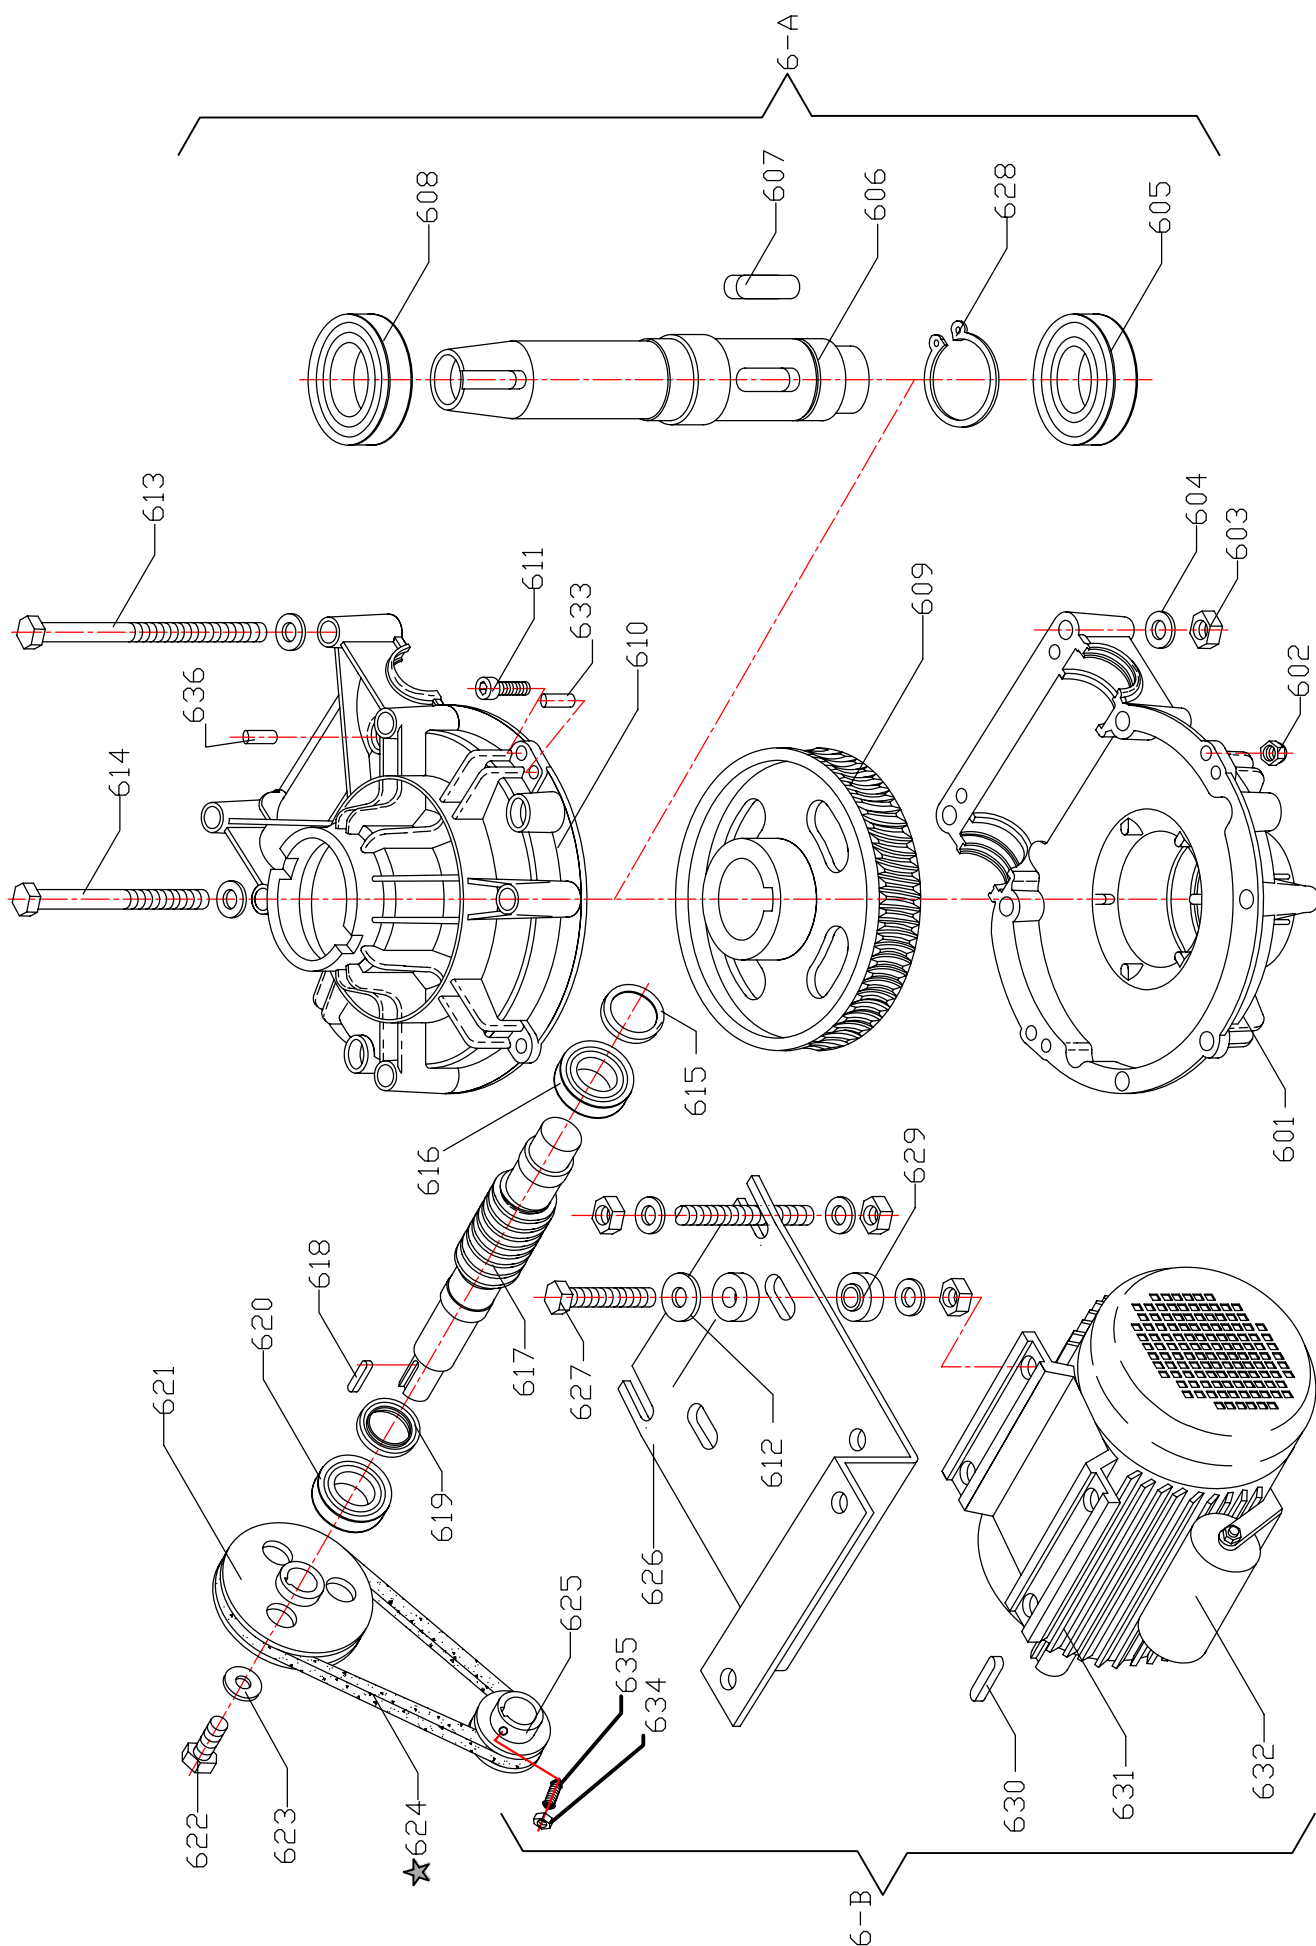

[illegible]